

Pocket-sized Thermometers

economical & easy to use

pen-shaped thermometer



This pen-shaped thermometer measures temperature over the range of -49.9 to 149.9 °C, features a Ø3.5 x 120 mm stainless steel penetration probe and incorporates a °C/°F switch and display hold feature. Supplied with a probe cover that includes a pocket clip.

specification	pen-shaped
range	-49.9 to 149.9 °C
resolution	0.1 °C/°F
accuracy	±1 °C
battery & life	1.5 volt LR44 - 5000 hours
sensor type	thermistor
display	6 mm LCD
dimensions	17 x 20 x 190 mm
weight	15 grams

order code	description	
810-260	pen-shaped thermometer	

T-shaped thermometer



This handy-sized thermometer measures temperature over the range of -49.9 to 149.9 °C, features a Ø3.5 x 120 mm stainless steel penetration probe and incorporates a °C/°F switch and display hold feature. Supplied with a probe cover that includes a pocket clip.

specification	T-shaped
range	-49.9 to 149.9 °C
resolution	0.1 °C/°F
accuracy	±1 °C
battery & life	1.5 volt LR44 - 5000 hours
sensor type	thermistor
display	6 mm LCD
dimensions	20 x 58 x 145 mm
weight	15 grams

order code	description	
810-265	T-shaped thermometer	

water resistant max/min thermometer

This handy pocket-sized, water resistant, max/min thermometer features a Ø2.5 x 125 mm fast response reduced tip, stainless steel food penetration probe. This thermometer is an ideal economical solution for numerous temperature measurement applications.

The thermometer measures temperature over the range of -49.9 to 199.9 °C with a resolution of 0.1 °C/°F and features three easy to use push buttons, max/min, °C/°F and on/off. Each unit is supplied with a probe cover that incorporates a pocket clip.



specification	water resistant
range	-49.9 to 199.9 °C
resolution	0.1 °C/°F
accuracy	±0.5 °C (-9.9 to 99.9 °C)
battery	3 volt CR2032 lithium coin cell
battery life	5000 hours
sensor type	thermistor
display	8.5 mm LCD
dimensions	Ø41 x 17 x 175 mm
weight	22 grams



order code	description	
810-270	water resistant thermometer	

Waterproof Thermometer

with max/min & °C/°F functions

- easy to use, pocket-sized thermometer
- Ø2.5 mm fast response probe

This waterproof thermometer measures temperature over the range of -49.9 to 199.9 °C with a 0.1 °C resolution and features a max/min temperature recording function and at the back of the instrument a discreet °C/°F and reset button.

The unit incorporates a Ø2.5 x 122 mm stainless steel food penetration probe. This waterproof thermometer incorporates the latest microprocessor technology, designed for reliability and ease of use in routine day-to-day catering, food preparation and industrial applications.

Each unit is supplied with a FREE protective silicone boot and protective probe cover that incorporates a pocket clip and wall-mounting keyhole slot.

order code	description	
810-275	waterproof thermometer	
830-275	replacement silicone boot	



FREE protective boot

Protects against accidental damage



specification	waterproof
range	-49.9 to 199.9 °C
resolution	0.1 °C/°F
accuracy	±0.5 °C (-9.9 to 99.9 °C) otherwise ±1.5 °C
battery	3 volt CR2032 lithium coin cell
battery life	5000 hours
sensor type	thermistor
display	8 mm LCD
dimensions	15 x 26 x 200 mm
weight	25 grams

Waterproof Thermometers

robust & heavy duty, optional longer probe

- max/min memory & display hold functions
- strong, robust, stainless steel probe

These easy to use, digital T-shaped waterproof thermometers offer IP66/67 protection and incorporate a reduced tip probe that is ideal for heavy duty applications.

Measuring temperature over the range of -49.9 to 149.9 °C with a 0.1 °C resolution, the thermometer will power off automatically after fifteen minutes, maximising battery life.

Each unit is housed in a robust polycarbonate case with a strong, stainless steel, penetration probe. The probe measures Ø5 x 125 mm or 300 mm with a reduced tip (Ø3.5 x 20 mm) to improve response time. The waterproof thermometers feature a max/min memory and display hold function.

order code	description	
810-285	T-shaped - 125 mm probe	
810-287	T-shaped - 300 mm probe	



specification	waterproof T-shaped
range	-49.9 to 149.9 °C
resolution	0.1 °C
accuracy	±1 °C (-19.9 to 119.9 °C)
battery & life	1.5 volt LR44 - 5000 hours
sensor type	thermistor
display	12 mm LCD
dimensions	30 x 88 x 170/345 mm
weight	50/55 grams

Super-Fast Mini Thermometer

with max/min & hold function

- fast response probe, 5 to 6 second readings
- easy to use, pocket-sized thermometer

The Super-Fast Mini is a pocket-sized, water resistant (IP65) thermometer that measures temperature over the range of -39.9 to 149.9 °C with a 0.1 °C/°F resolution. The instrument turns on automatically when the probe cover is removed, allowing for quick, easy temperature measurements.

The thermometer incorporates a fast response Ø2.5 x 73 mm stainless steel penetration probe with reduced tip and features a max/min and hold function. Each unit is powered by a CR2032 lithium coin cell battery and supplied with a probe cover with integral pocket clip.

reduced tip for fast response



order code	description	
810-279	Super-Fast Mini thermometer	



specification	Super-Fast Mini
range	-39.9 to 149.9 °C
resolution	0.1 °C/°F
accuracy	±0.5 °C (-9.9 to 99.9 °C)
battery & life	3 volt CR2032 - 5000 hours
sensor type	thermistor
display	8 mm LCD
dimensions	Ø25 x 150 mm
weight	20 grams

ThermoPop® Thermometer

with 360° rotating display


- backlit display & auto-power off function
- reduced tip, 5 to 6 second readings
- waterproof to IP66

The ThermoPop is a pocket-sized, waterproof (IP66) thermometer which incorporates a Ø3 x 114 mm stainless steel penetration probe with reduced tip.

The thermometer incorporates a unique 360° rotating display. Simply push a button to rotate the display in 90° increments, enabling the user to read the temperature in any position ie. left hand, right hand, vertical or horizontal.

The unit indicates temperature over the range of -50 to 300 °C with a 1 °C/°F resolution. Available in red, white or blue, each ThermoPop is supplied with a probe cover with integral pocket clip.

order code	description	
810-301	ThermoPop thermometer - white	
810-304	ThermoPop thermometer - red	
810-305	ThermoPop thermometer - blue	

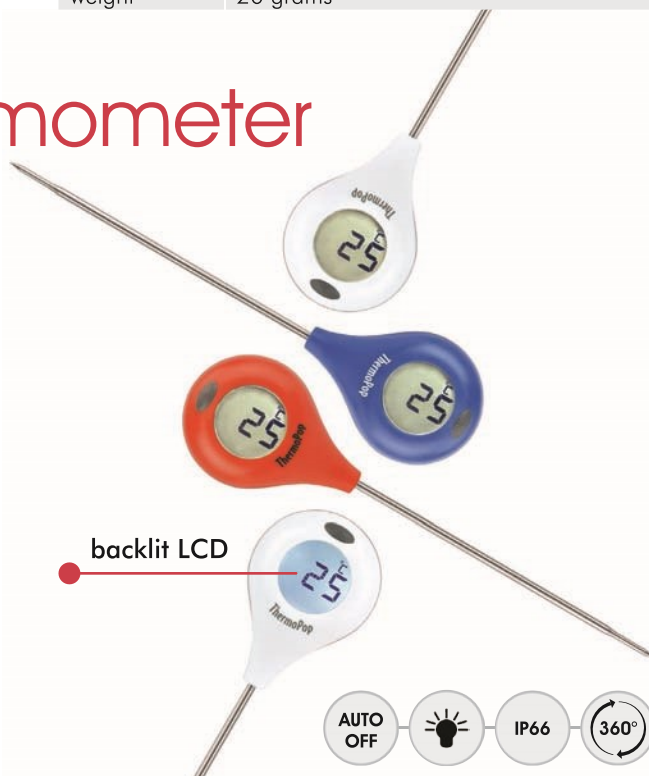

backlit LCD



specification	ThermoPop
range	-50 to 300 °C
resolution	1 °C/°F
accuracy	±1 °C (-20 to 120 °C)
battery & life	3 volt CR2032 - 5000 hours
display	9 mm LCD
dimensions	20 x 45 x 178 mm
weight	30 grams