

ThermaLite® Thermometers

with assured accuracy for life

- temperature range -39.9 to 149.9 °C, with a high accuracy
- reduced tip provides faster & more accurate readings
- ThermaLite 2 includes CalCheck 0.0 °C function
- FREE traceable certificate of calibration

The ThermaLite digital thermometers display temperature over the range of -39.9 to 149.9 °C with a 0.1 °C/°F resolution and an accuracy of ± 0.5 °C (-39.9 to 124.9 °C). This accuracy is guaranteed for life, due to the instruments advanced electronics. The ThermaLite 2 also incorporates CalCheck and hold functions.




The thermometers weigh only 45 grams including battery, and feature a clear, easy to read LCD display with an open circuit 'Err' and low battery indication. The ThermaLite's auto-power off facility turns the instrument off automatically after ten minutes, maximising battery life. The thermometer is housed in a high impact ABS plastic case which includes the 'Biomaster' additive that reduces bacterial growth, ideal for routine day-to-day food and catering applications.

The $\varnothing 3.3 \times 80$ mm reduced tip, stainless steel, penetration probe is ideal for measuring the temperature of food and semi-solid materials. The ThermaLite is available in six colours, suitable for different applications.

ThermaLite 2 with CalCheck function

- The ThermaLite 2 features a CalCheck 0.0 °C (± 0.1 °C) function that allows the user to verify the accuracy of the thermometer at any time, giving confidence that measurements are accurate.

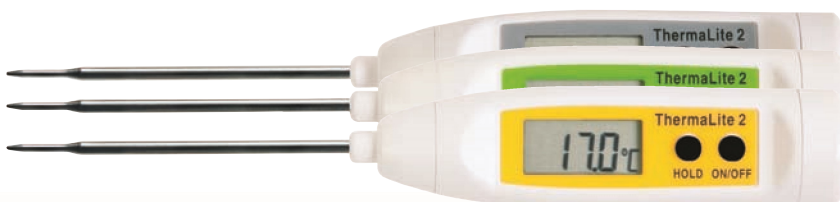

Protective Silicone Boot

Protects your instrument against accidental damage and increases the water resistance to an IP65 rating

order code	description
226-101	ThermaLite 1 - grey
226-111	ThermaLite 1 - white
226-121	ThermaLite 1 - yellow
226-131	ThermaLite 1 - green
226-141	ThermaLite 1 - red
226-151	ThermaLite 1 - blue
226-102	ThermaLite 2 - grey
226-112	ThermaLite 2 - white
226-122	ThermaLite 2 - yellow
226-132	ThermaLite 2 - green
226-142	ThermaLite 2 - red
226-152	ThermaLite 2 - blue
830-280	protective silicone boot



specification	ThermaLite 1 & 2
range	-39.9 to 149.9 °C
resolution	0.1 °C/°F
accuracy	± 0.5 °C (-39.9 to 124.9 °C)
battery	3 volt CR2032 lithium coin cell
battery life	5000 hours
sensor type	thermistor
display	10 mm LCD
dimensions	$\varnothing 29 \times 196$ mm (inc. probe)
weight	45 grams

FREE traceable certificate of calibration included