

OVEN DIAL THERMOMETERS

Ø50 mm dial oven thermometer



This stainless steel oven thermometer features a clear Ø50 mm dial with colour-coded zones. The green marker indicates the minimum temperature that commercial heated display units should be kept at. The oven thermometer indicates temperature over the range of 50 to 300 °C in 10 °C divisions. The case measures 40 x 60 x 70 mm.

The unit can be free-standing or hung from a shelf and should be positioned in the middle of the oven for the most accurate temperature reading.

Order code	Description
800-931	Ø50 mm dial oven thermometer

Ø55 mm dial oven thermometer



This stainless steel oven thermometer features a clear Ø55 mm dial with colour-coded zones. The green marker indicates the minimum temperature that commercial hot food display units should be kept at. The oven thermometer indicates temperature over the range of 0 to 300 °C in 10 °C divisions. The case measures 43 x 66 x 80 mm.

The thermometer can be free-standing or hung from a shelf and should be positioned in the middle of the oven for the most accurate temperature reading.

Order code	Description
800-809	Ø55 mm dial oven thermometer

OVEN/COOKING THERMOMETER & TIMER

- Programmable audible high alarm
- Robust, stainless steel oven probe


This combined countdown timer, thermometer and clock displays both the actual and the alarm set temperature over the range of 0 to 300 °C and simultaneously the countdown or the actual time.

The timer will count down or up from/to 23 hours, 59 minutes and 59 seconds and the real time clock will display the time in either a 12 or 24 hour format.

The unit features an audible high alarm that can be set from the simple to use seven-button keypad. The alarm temperature is continuously displayed. The unit is designed to sit on a worktop or can be attached to an appliance via the magnetic pads at the rear of the instrument.

The high temperature probe has an insertion length of 150 mm (Ø4 mm) and is supplied with a one metre stainless steel braided lead.

Order code	Description
810-060	Oven thermometer & timer
810-061	Replacement oven probe

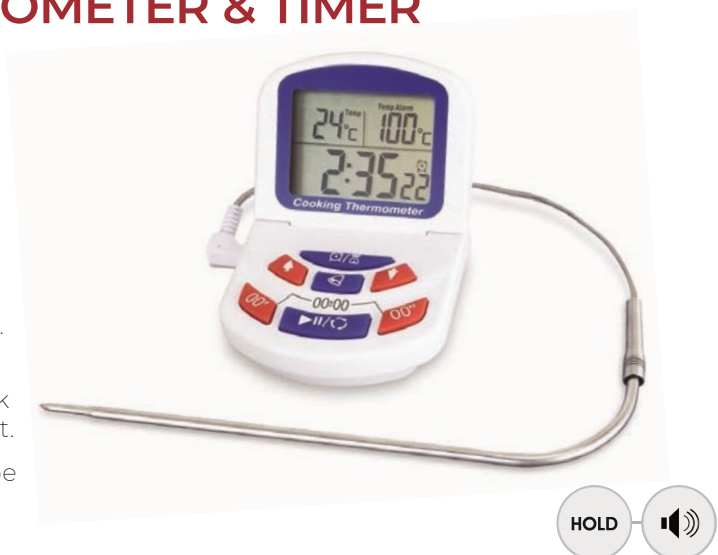

Specification	Oven thermometer & timer
Range	0 to 300 °C
Resolution	1 °C/°F
Accuracy	±1 °C (0 to 130 °C)
Battery & life	2 x 1.5 volt AAA - 5000 hours
Sensor type	Thermistor
Display	Triple custom LCD
Dimensions	18 x 73 x 125 mm
Weight	128 grams